



## INSTRUCTIONS FOR DRIVER

Robot milking

### STARTING EMPTYING

Connect emptying hose



Press [**Driver/-**] to Menu "1 EMPTYING"

**ON**

Press [**On**]

**Wait!**

**ON**

Press [**On**] – outlet valve is opened and over pumping can occur.

**OFF**

Press [**Off**] once emptying is complete

Remove emptying hose  
Put on cleaning return cap

**ON**

Press [**On**] – Start complete cleaning