



## INSTRUCTIONS FOR DRIVER

Conventional milking, with 1 cleaning pump.

### STARTING EMPTYING


Connect emptying hose  
Open the manual outlet valve



Press [**Driver/-**] to Menu “1 EMPTYING”



Press [**On**] – agitation begins

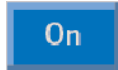


Press [**On**] – emptying can be performed



Once emptying is complete, press [**Off**].

Remove emptying hose  
Put on cleaning return cap

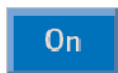

Press [**On**] – Start complete cleaning



## INSTRUCTIONS FOR FARMER

Conventional milking, 1,600l – 30,000l

### STARTING COOLING

Check that the tank is empty and clean after cleaning

Remove the cleaning return cap

Close the cleaning return valve to pump 2

**On**

Acknowledge cleaning with **[On]**

**On**

Press **[On]** to start cooling