



INSTRUCTIONS FOR DRIVER

Conventional milking with 2 cleaning pumps.

STARTING EMPTYING

Connect emptying hose
Open the manual emptying valve



Press **[Driver/-]** to Menu “1 EMPTYING”



Press **[On]** – agitation begins



Press **[On]** – emptying can be performed



Once emptying is complete, press **[Off]**.



A

B

Remove emptying hose
Open manual cleaning return valve (A) to pump 2
Put on cleaning return cap (B)



Press **[On]** – Start complete cleaning



INSTRUCTIONS FOR FARMER

Conventional milking, 1,600l – 30,000l

STARTING COOLING

Check that the tank is empty and clean after cleaning
Remove the cleaning return cap
Close the cleaning return valve to pump 2

On

Acknowledge cleaning with **[On]**

On

Press **[On]** to start cooling