



## INSTRUCTIONS FOR DRIVER


Robot milking

### STARTING EMPTYING

Connect emptying hose



Press **[Driver/-]** to Menu “1 EMPTYING”

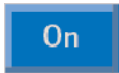

Press **[On]**

Wait!




Press **[On]** – outlet valve is opened and over pumping can occur.



Press **[Off]** once emptying is complete

Remove emptying hose  
Put on cleaning return cap

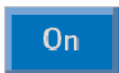

Press **[On]** – Start complete cleaning